




● SPECIFICATIONS

The pressure washer can work independently of the water mains drawing its water by suction from a container, tank, stream or river.

The suction kit contains :

- 4 m suction hose Ø 20 (ASP4)
- Suction head with inlet filter
- Non return valve

In case of water supply by suction, the outlet of the VST has to be plugged by the VA12 valve.

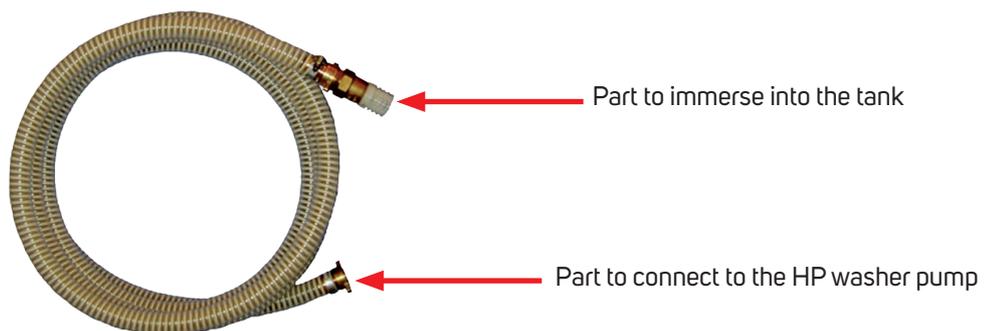

Instructions for use :

- Connect the suction hose to the pump.
- Unscrew the suction head.
- Fill up the suction hose with water (to avoid dry start).
- Screw up the suction head.
- Immerse the suction head in the tank.
- Turn on the pressure washer.
- Press the trigger of the gun.
- Water jet pressure rises immediately (operating pressure approximately identical to what you get when connected to the mains).